


Ridge Line Instructions: Axial Wraith (Front Only)

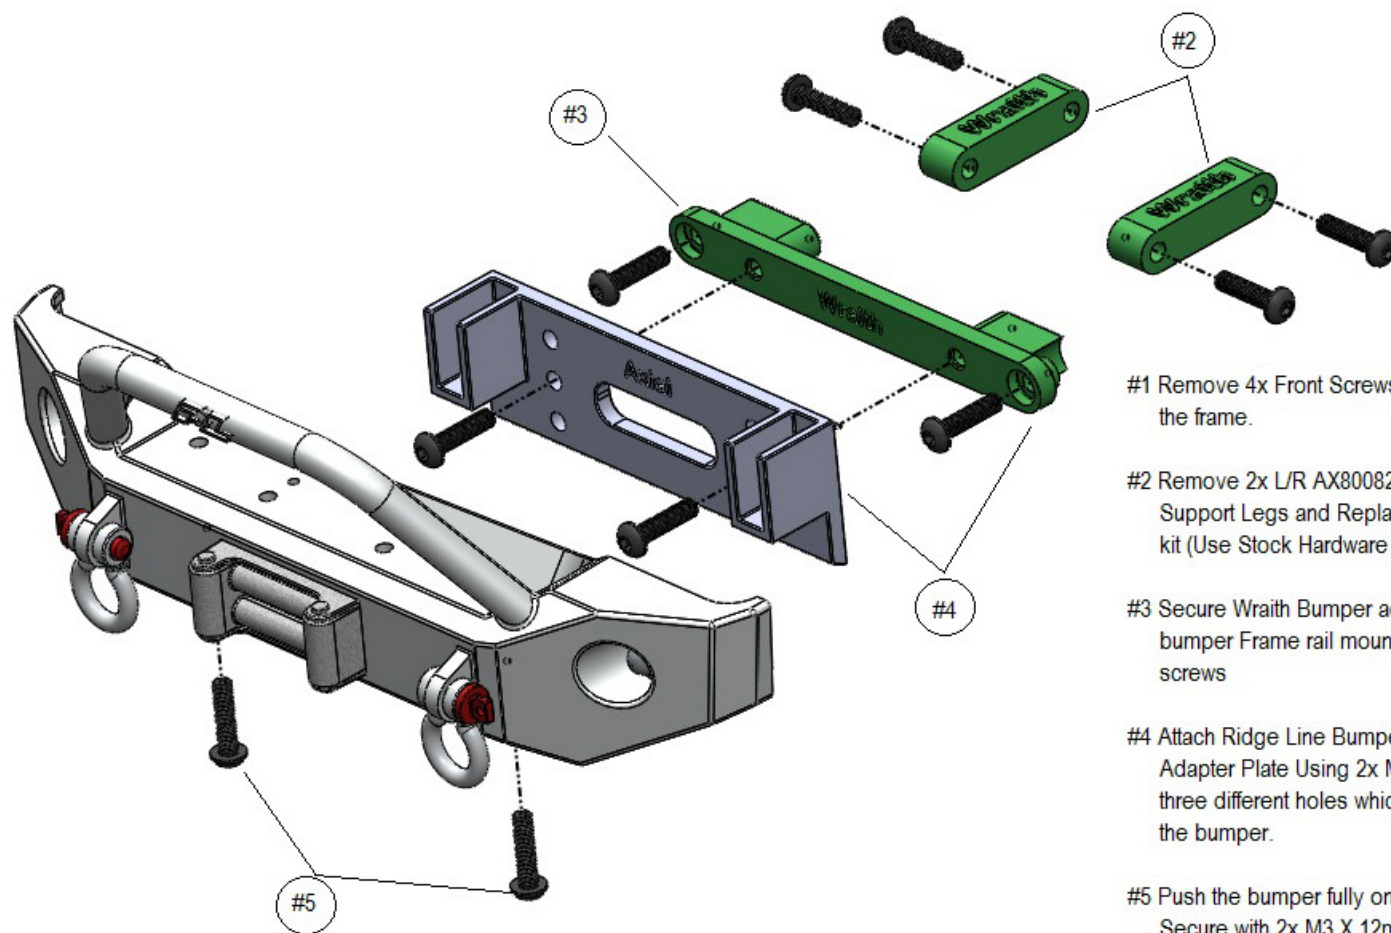

#1 Remove 4x Front Screws Holding the Stock Bumper to the frame.

#2 Remove 2x L/R AX80082 3 Stock Bumper Upper Support Legs and Replace with 2x spacers provided in kit (Use Stock Hardware to Re-Attach)

#3 Secure Wraith Bumper adapter plate to the OEM Lower bumper Frame rail mounts using 2x supplied M3 X 12mm screws

#4 Attach Ridge Line Bumper Mounting Plate to the Bumper Adapter Plate Using 2x M3 X 12mm Screws. Note there are three different holes which allow you to adjust the height of the bumper.

#5 Push the bumper fully on to the Bumper Mounting Plate and Secure with 2x M3 X 12mm Screws through the 2x furthest slots / openings in the bottom of the bumper.

PROLINE