


## Ridge Line Instructions: T-Maxx, E-Maxx

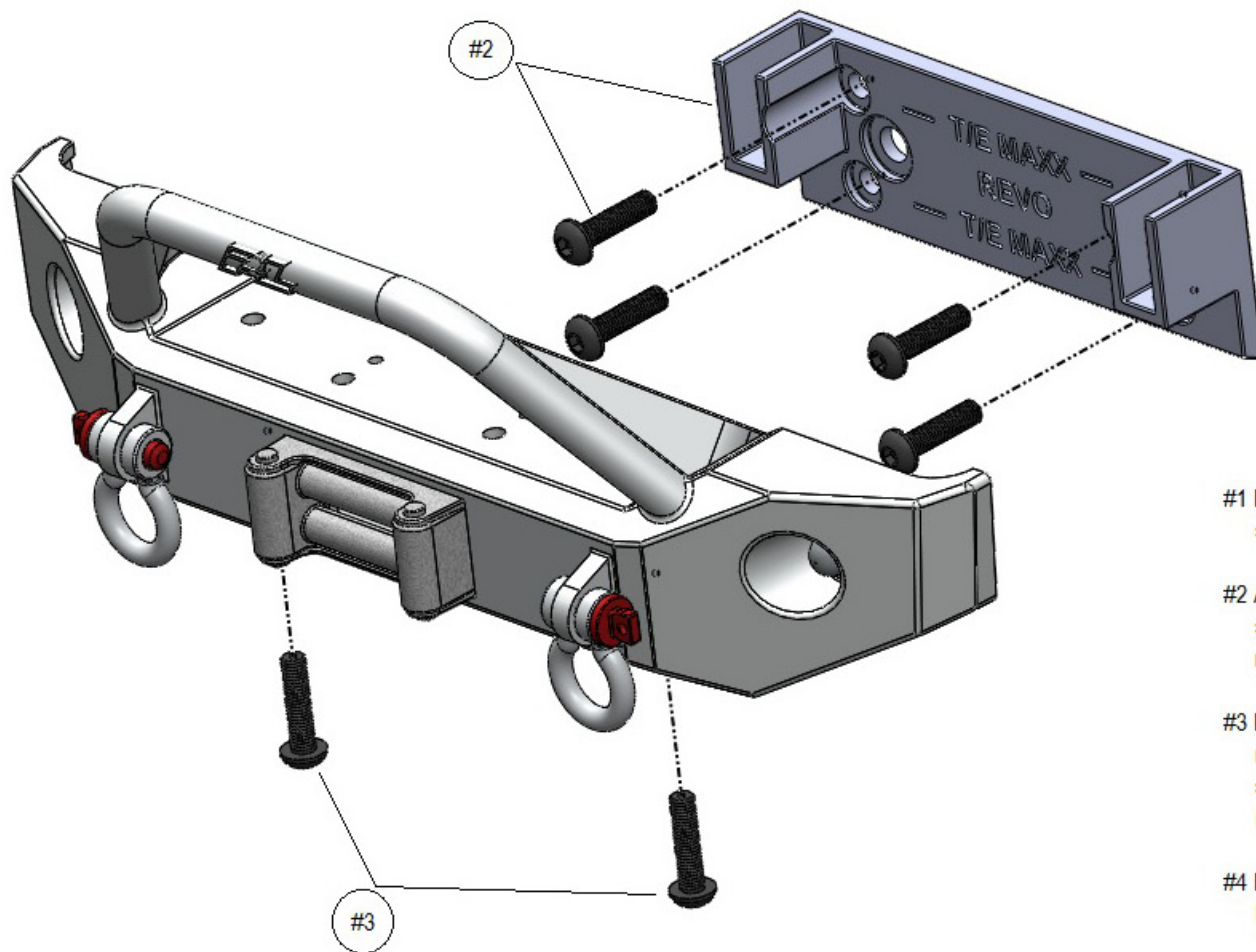

#1 Remove the 4x M3 X 12mm bumper mounting screws and the Stock Bumper.

#2 Attach the Bumper Mounting Plate Using the supplied 4x M3 X 12MM Screws. You can re-use your Stock Hardware If desired.

#3 Push the bumper fully on to the Bumper mounting plate and Secure with 2x M3 X 12mm screws through the 2x furthest slots / openings in the bottom of the bumper.

#4 Repeat this same process for installing the rear bumper.

**PROLINE**